

ADJUST VOLUME

Press the volume button up or down to adjust the handset or speaker volume when the phone is in use.



Press the volume button up or down to adjust the ringer volume when the phone is not in use

