
TRACE A CALL FROM PHONE MODEL CP-7821

In the event that you receive a threatening phone call, you'll want documentation of the callers phone number. To create a record of the number follow the steps below.

• While you are on the phone with the person who called in with the bomb threat, press the button below the three dots.

On the next screen press the button below MCID.

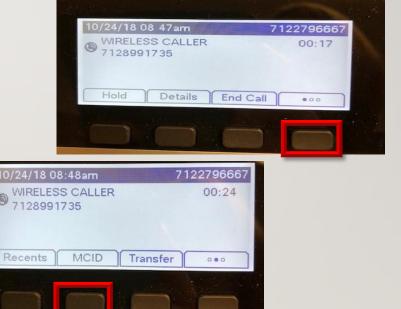

• Tod Stokes (Technology) will receive notification of the traced number and he will contact you.